 
 


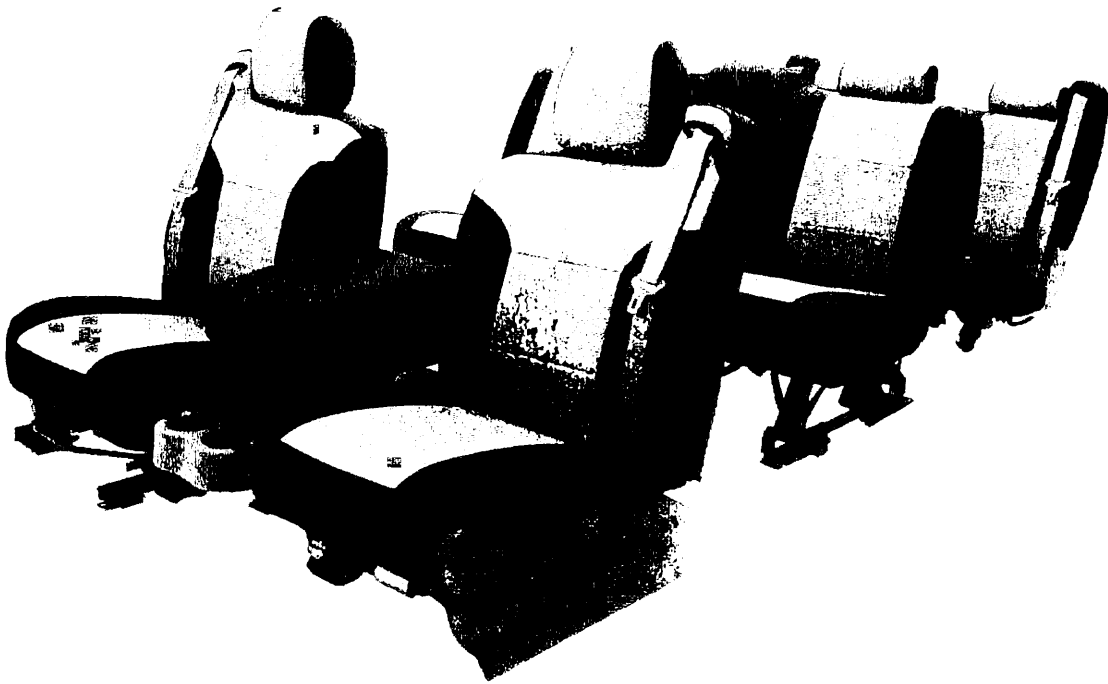

Custom Seat Cover Installation




Custom Seat Cover Installation	3
Removing a Headrest	4
Backrest Cover Installation	7
Seat Bottom Cover	10
Solid Bench	11
Console Cover Installation	12
Special Instructions - 1	13
Special Instructions - 2	14
Finishing Touches	15

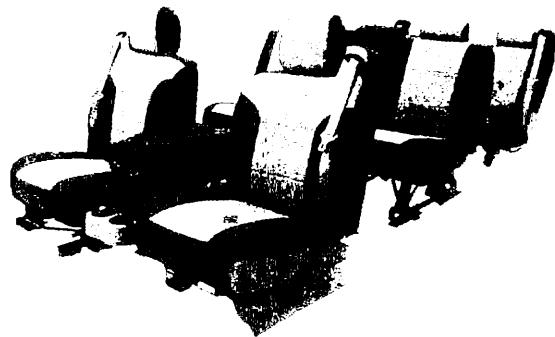


Custom Seat Cover

 
Also Available

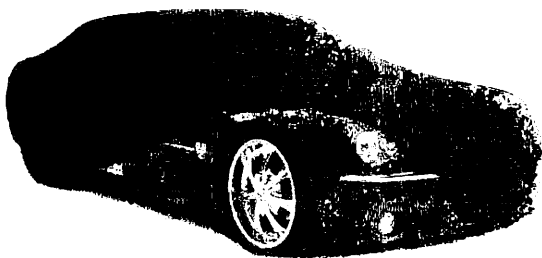

Custom Car Cover

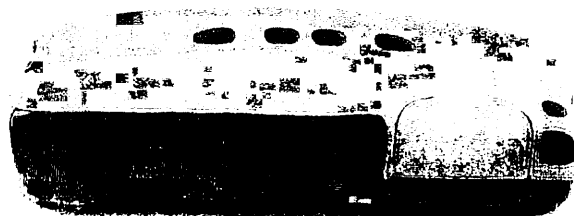 

Custom Dash Cover

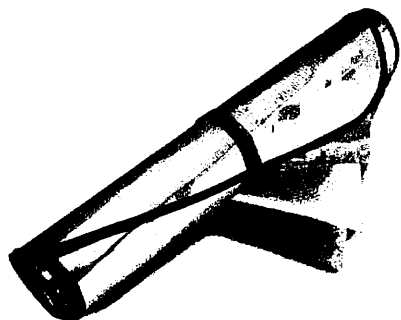 

Custom Sun Shield

 


Custom Floor Mats


COPYRIGHT 2005 SHRIN CORPORATION




Custom Seat Cover Installation

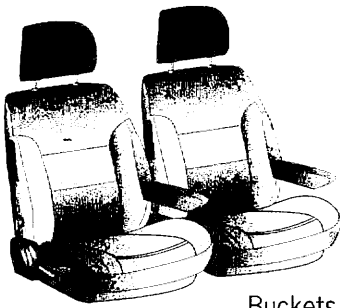


Buckets

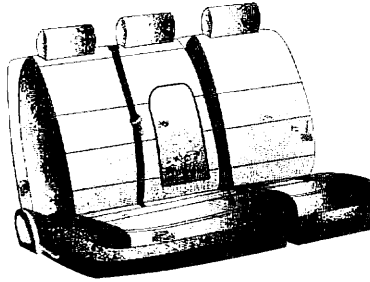 


Split Bench
w/ integrated belts

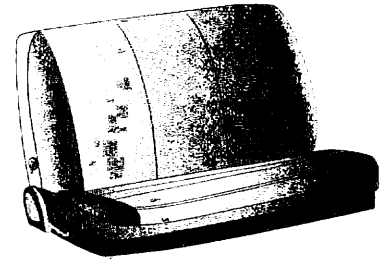 


Solid Bench

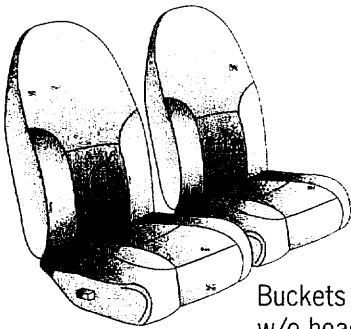 


Buckets
w/o headrests

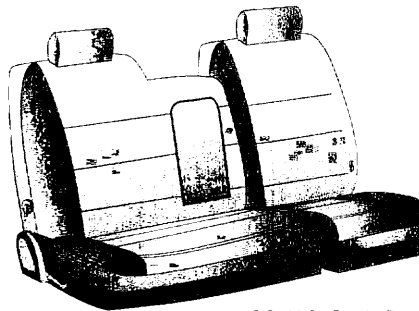 


60/40 Split Bench

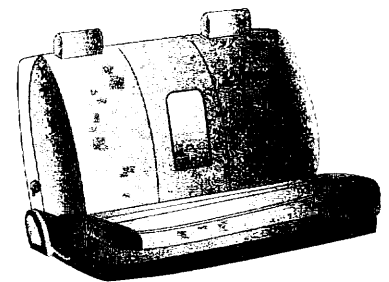 


Solid Bench
w/ headrests

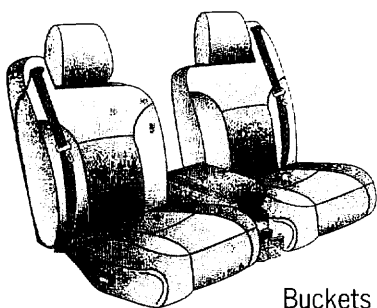 

Buckets
w/ seatbelts

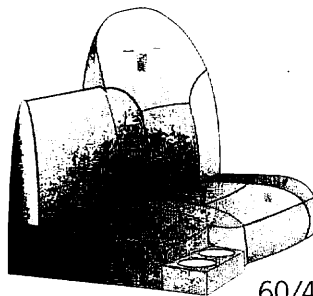 

60/40 Split Bench









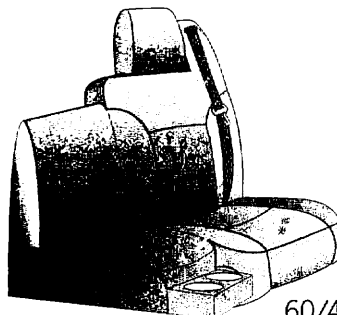 


60/40 Split Bench
w/ integrated belts


COPYRIGHT 2005 SHRIN CORPORATION

Removing a Headrest

         TABs
Depress one or both side tabs while lifting headrest. This may require more than one person.

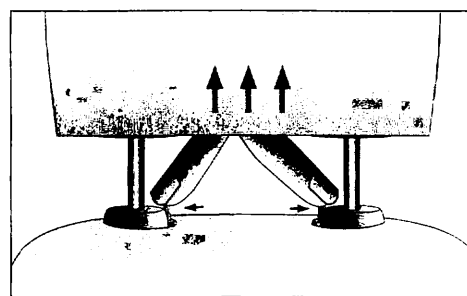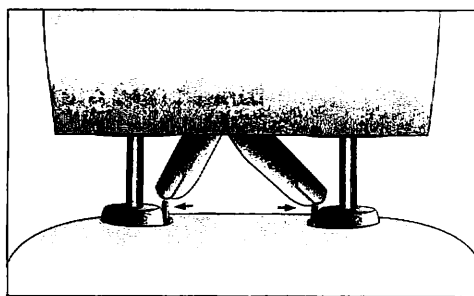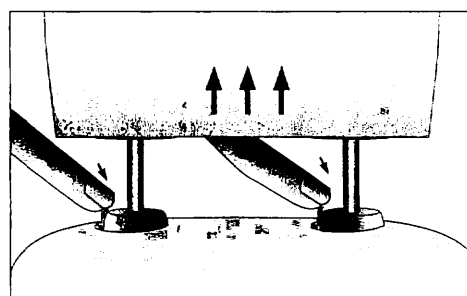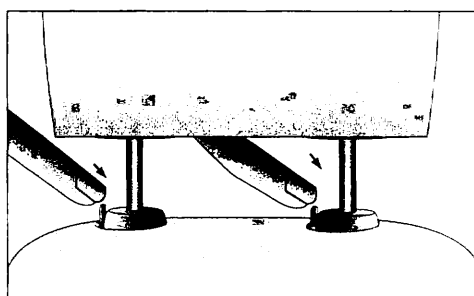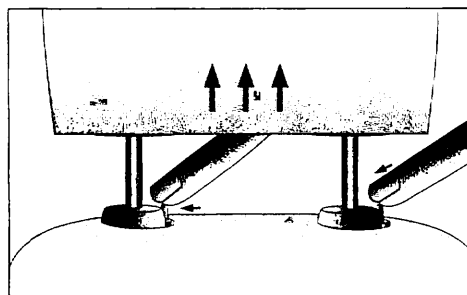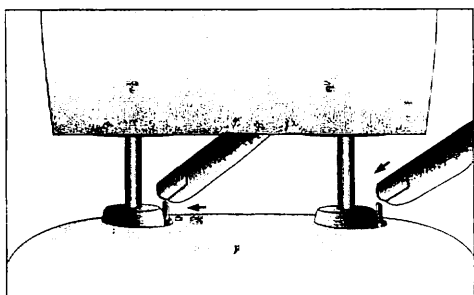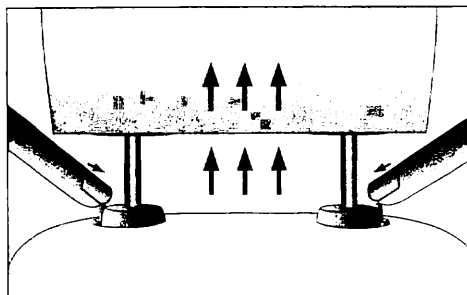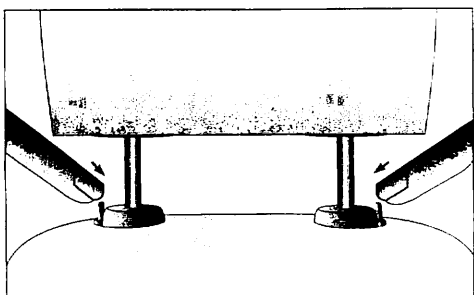
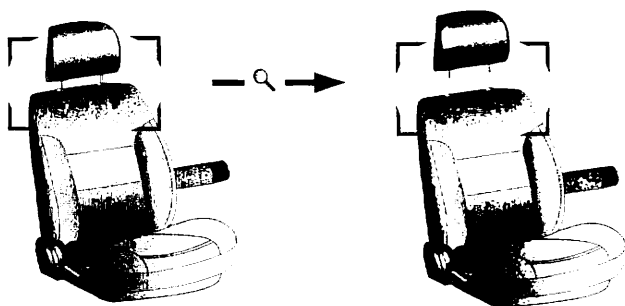


COPYRIGHT 2005 SHRIN CORPORATION

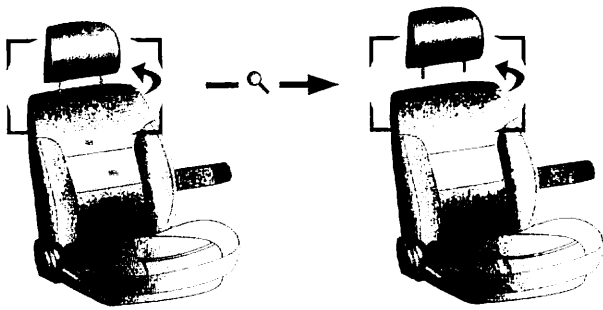 


Removing a Headrest

  
PIN HOLES on Headrest
Insert a paperclip end into the hole on the side of the headrest top.
While pressing the paper clip, lift headrest

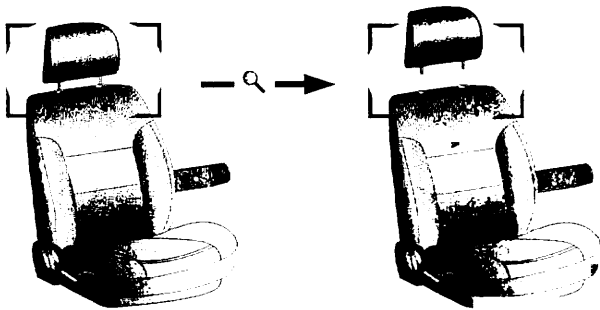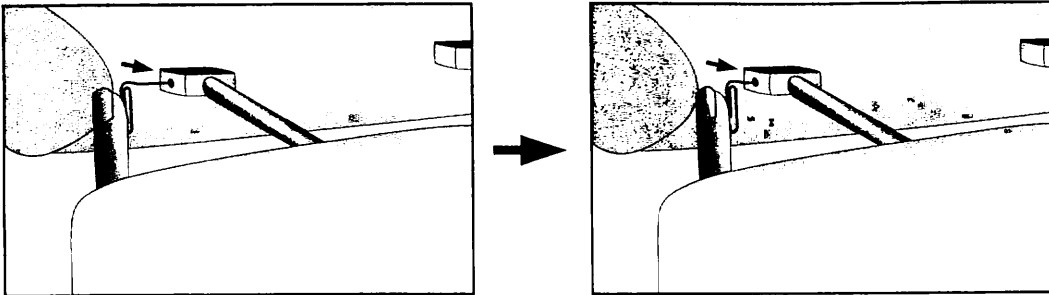

Removing a Headrest

  SLOT and TAB
Depress the tab and press into the slot at the same time, and lift headrest. This requires two or more people.




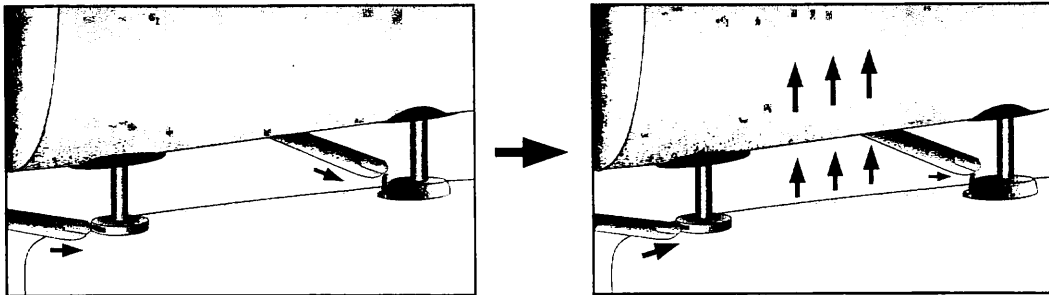


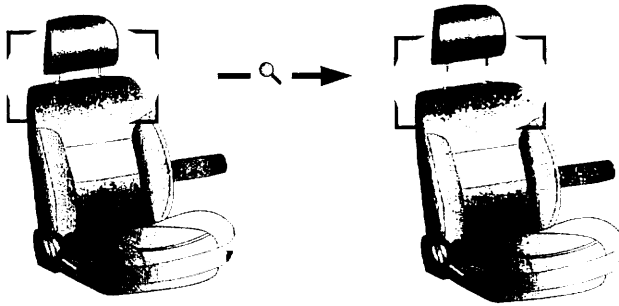

Removing a Headrest

PIN HOLE and TAB

    Insert a paperclip end into the hole on the side of the headrest base. While pressing the paper clip, press the tab on the other base. While pressing both, lift the headrest. This requires two or more people.

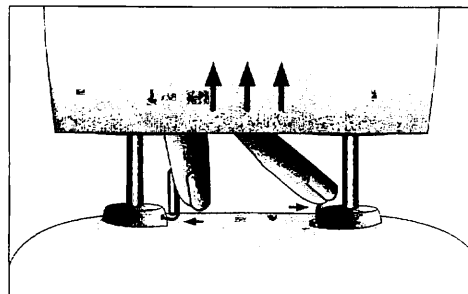
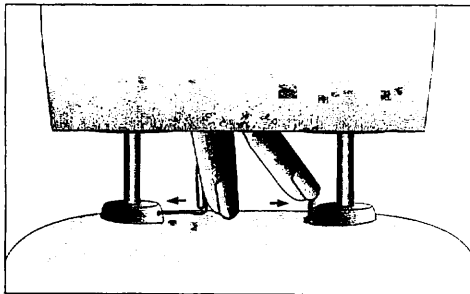
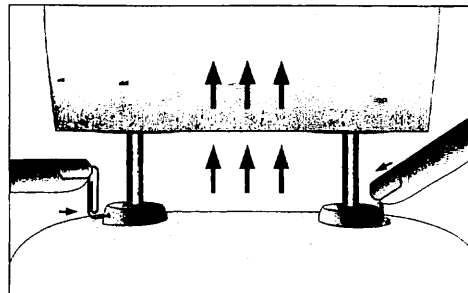
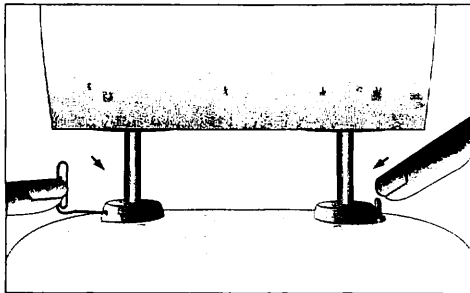


COPYRIGHT 2005 SHRIN CORPORATION



Backrest Cover Installation

    Bucket Seats with
Non-Removeable Headrest





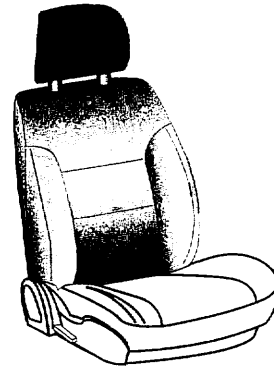
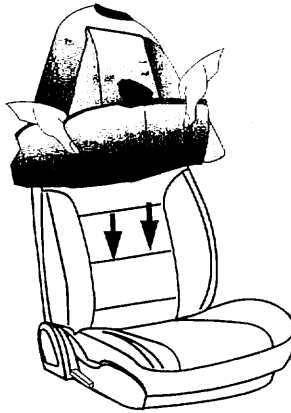
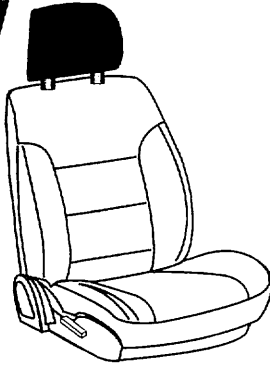
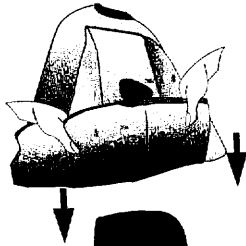


TIP: Fold the seatback forward to gain better access while passing the flap through



Backrest Cover Installation

        Certain Seats Required to be
Folded forward for proper installation

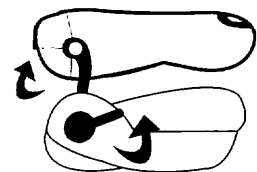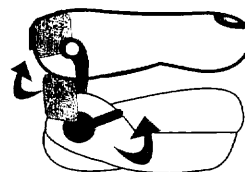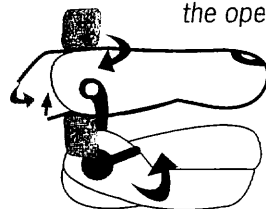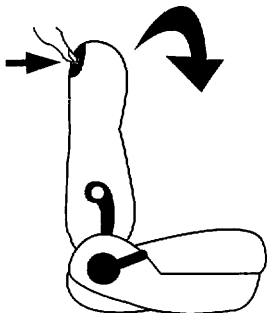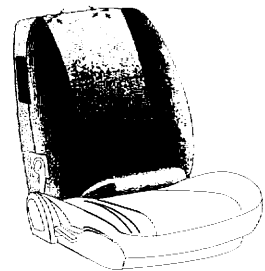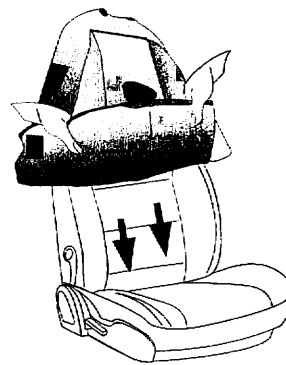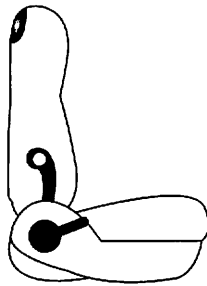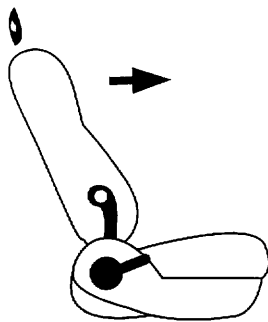


Attach velcro to the flap which is passed through the opening between seatback and seat bottom.

COPYRIGHT 2005 SHRIN CORPORATION



Backrest Cover Installation

 Bucket Seats w/ Integrated Seat Belts

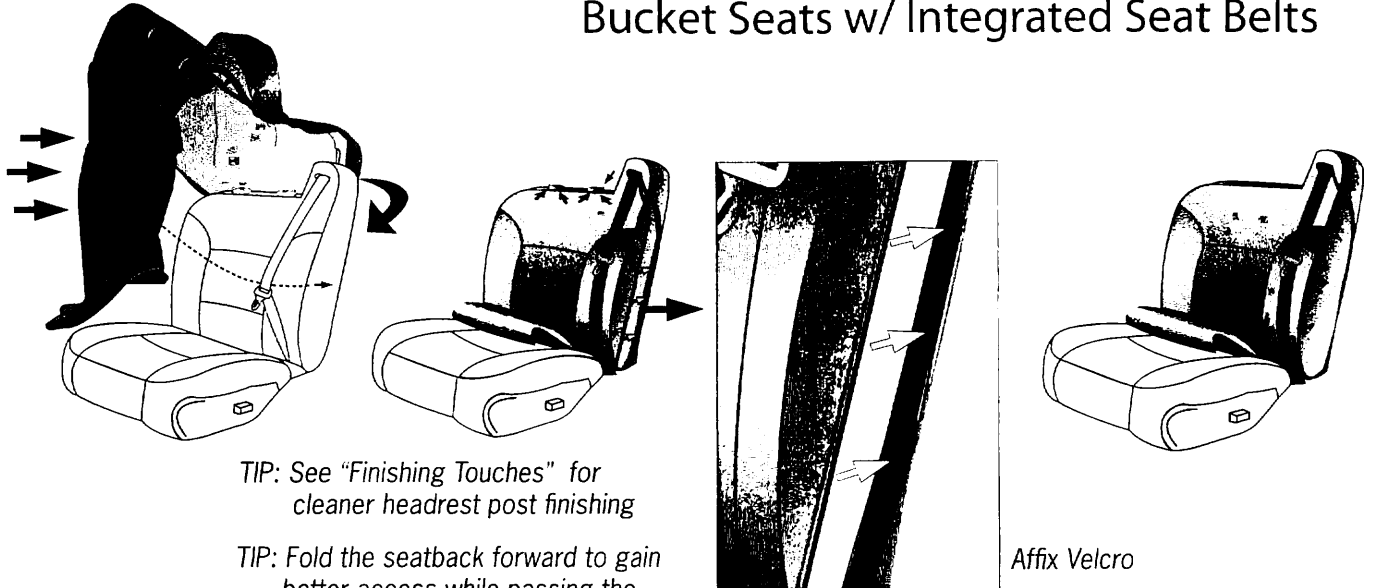

TIP: See "Finishing Touches" for cleaner headrest post finishing

 
TIP: Fold the seatback forward to gain better access while passing the flap through the seatback and seat bottom

Affix Velcro



Backrest Cover Installation

High-Back Bucket Seats

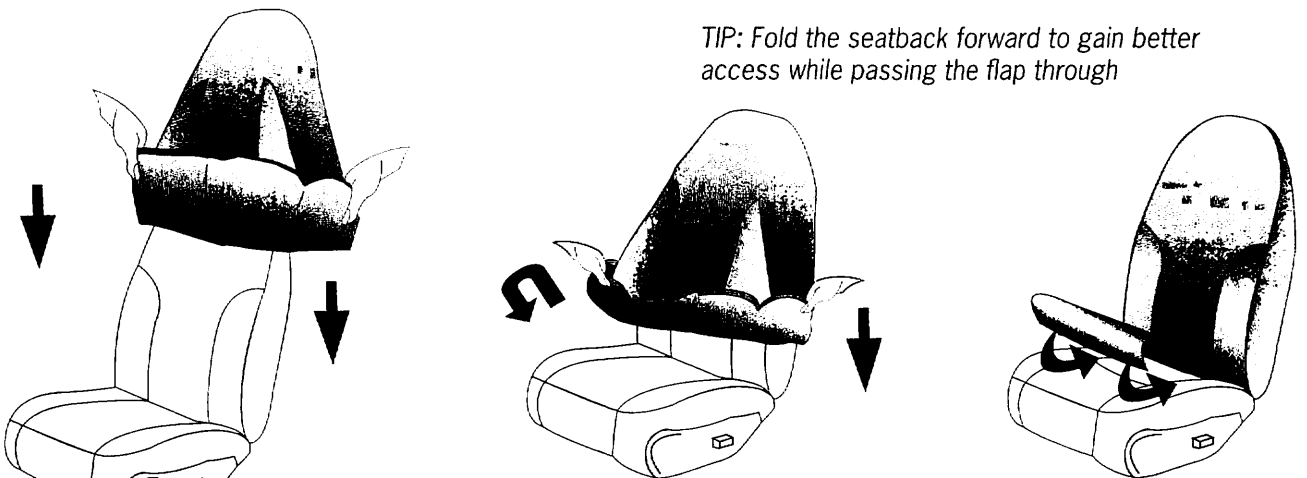


TIP: Fold the seatback forward to gain better access while passing the flap through

Pass flap through the opening between seatback and seat bottom, then attach velcro




COPYRIGHT 2005 SHRIN CORPORATION



 Backrest Cover Installation 60/40 Split Bench

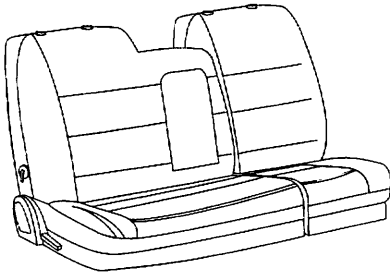

   See "Removing a Headrest" section for details on removing headrests.

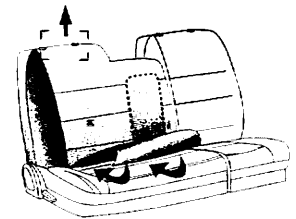
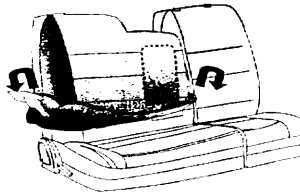
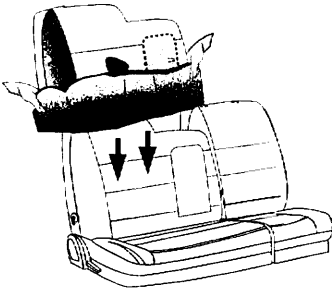


TIP: Fold the seatback forward to gain better access while passing the flap through

Pass flap through the opening between seatback and seat bottom, then attach velcro




   Backrest Cover Installation Special - for older Jeep models

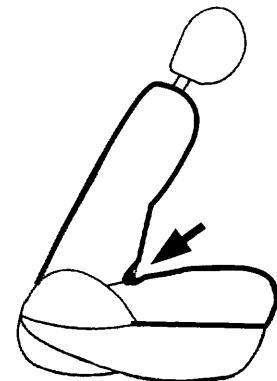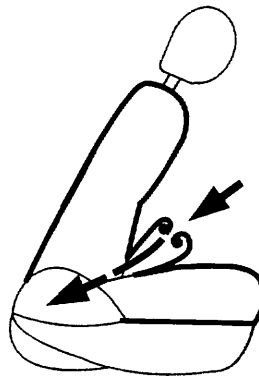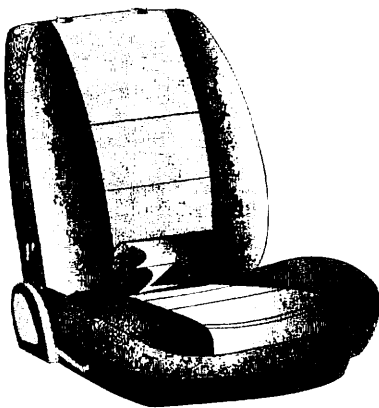


COPYRIGHT 2005 SHRIN CORPORATION



 
Seat Bottom Cover

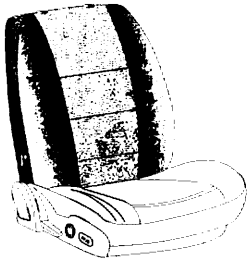





 
TIP: Fold the seatback forward to gain better access while passing the flap through

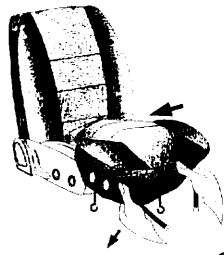

or

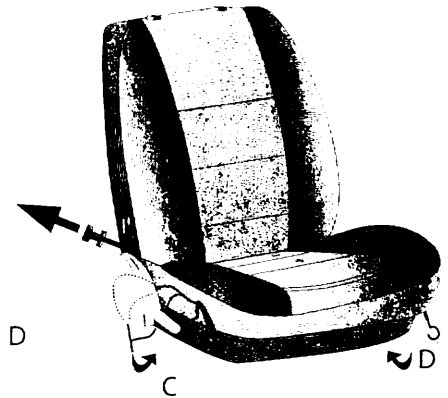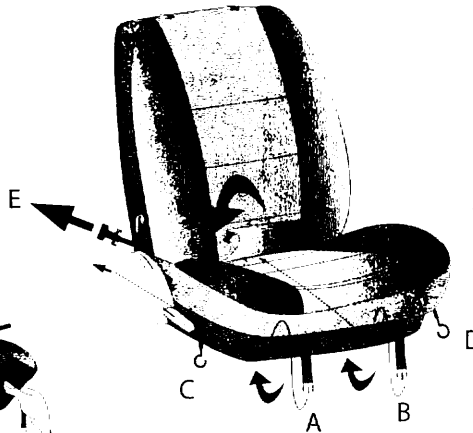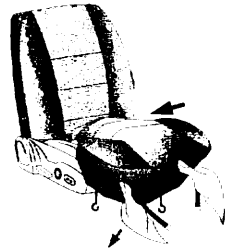   


Note: Some seat bases are not covered.

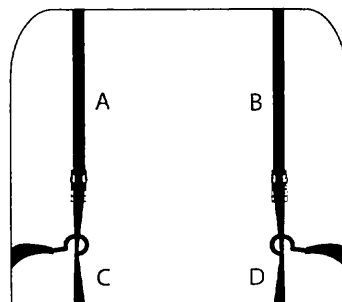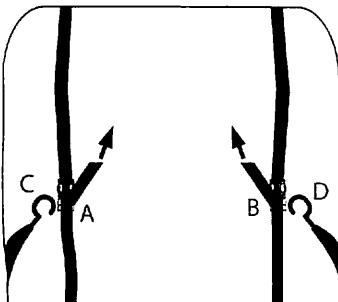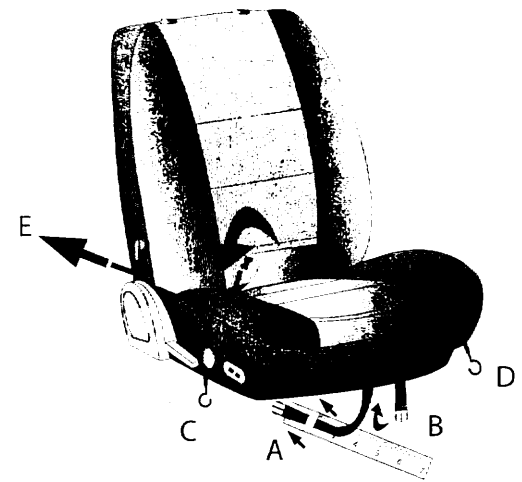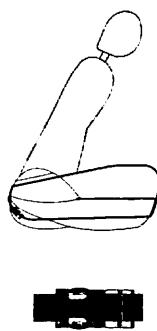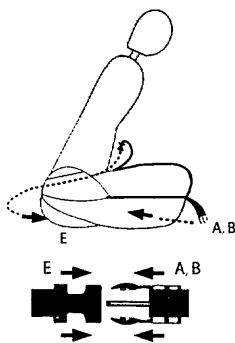     

Position cover over seat bottom. Pass flap through and attach buckles and hooks.

TIP: Tuck excess material behind plastic trim pieces for an extra custom look.



 
COPYRIGHT 2005 SHRIN CORPORATION

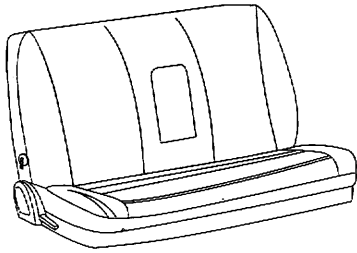

Solid Bench









Follow these simple instructions if you have a sold bench seat (Three people can sit on the seat) (with and without headrests)

   TIP: Fold the seatback forward for easier access

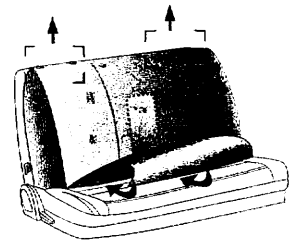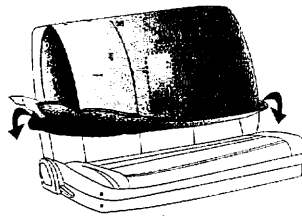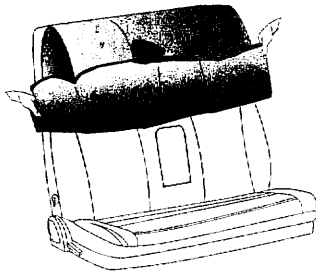

Place backrest cover over backrest. If the seat has a folding armrest, place it in the "up" position. If seat has headrests, remove headrests prior to installation (see "Headrest Removal" instructions)

        Tuck flap through the opening between seatback and seat bottom.

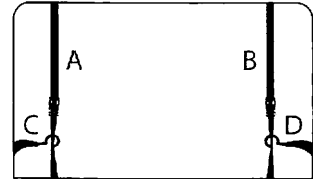
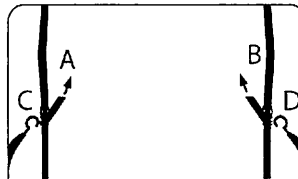
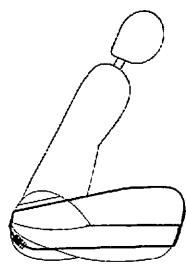
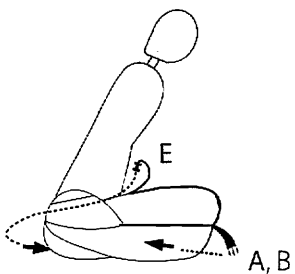
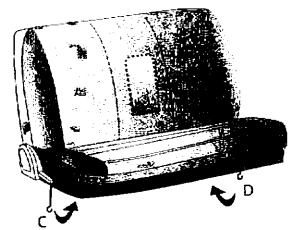
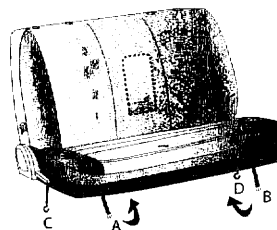
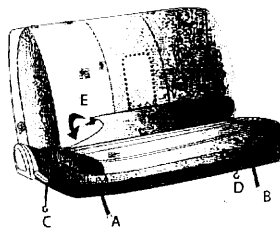
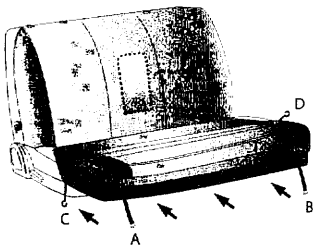


Place seat bottom cover over seat bottom, and affix straps.

See "Finishing Touches" instructions for extra tips



        
COPYRIGHT 2005 SHRIN CORPORATION
Console Cover Installation

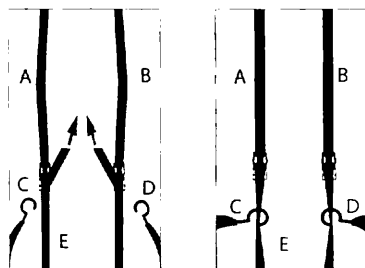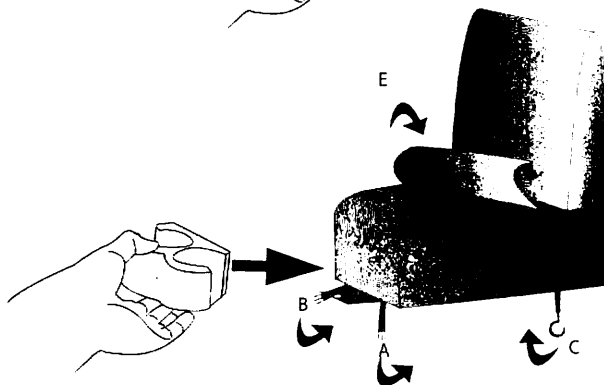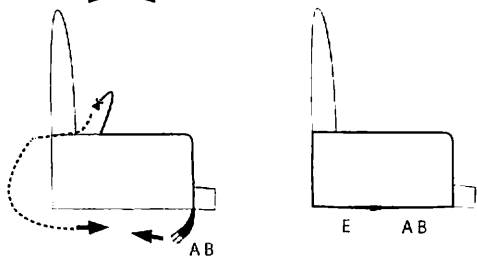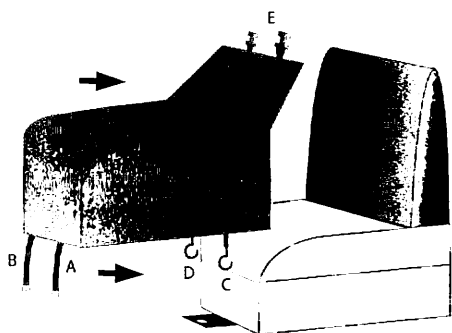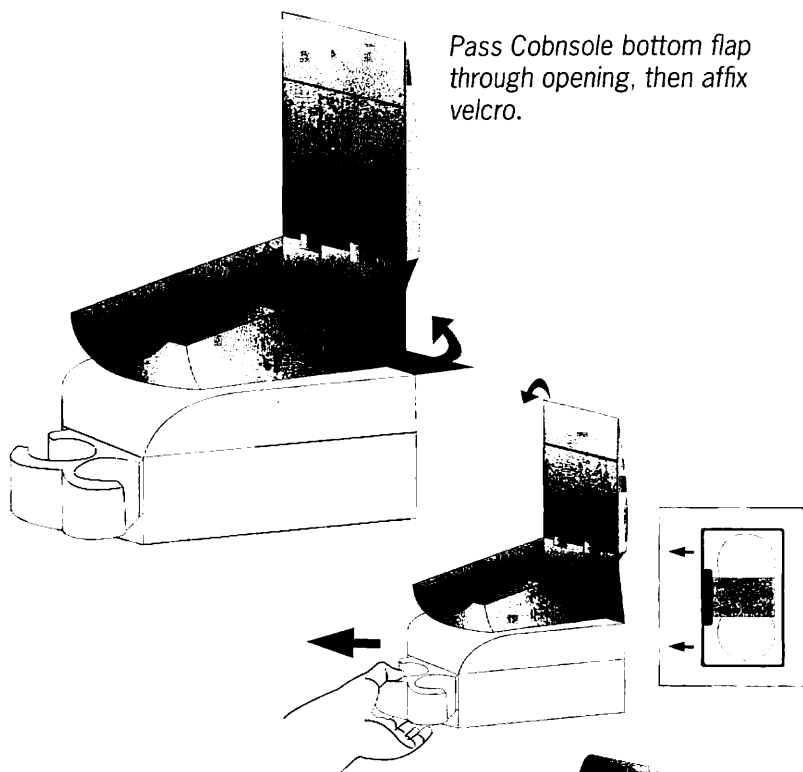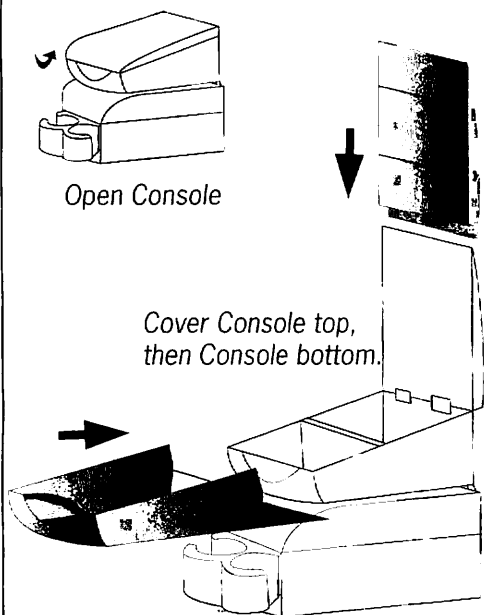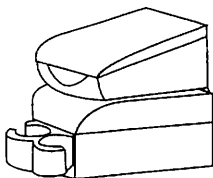


COPYRIGHT 2005 SHRIN CORPORATION

Special Instructions - 1

 Seats with Airbags, Lumbar Supports and Armrests require special instructions:

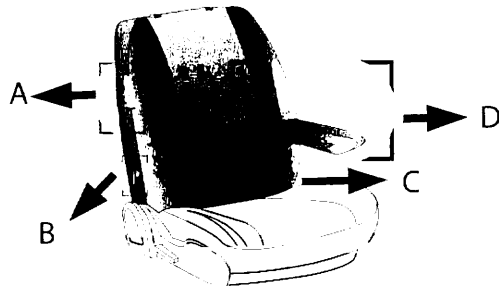


A

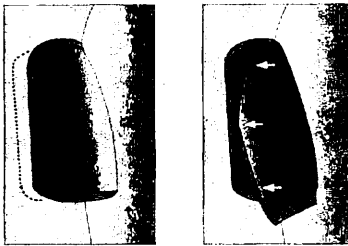 

Seats with Integrated Seat Airbags must be covered only with seat covers designed with opening flaps. The flap inserts inside the cutout, and should be able to open freely in case of deployment.


If your vehicle has seat mounted airbags, be certain that the seat covers have airbag cutouts or flaps! **DO NOT COVER SEAT AIRBAGS**

 B

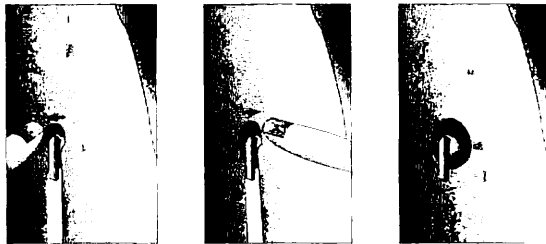


Some levers or controls may require a slit in the seat cover.

 C

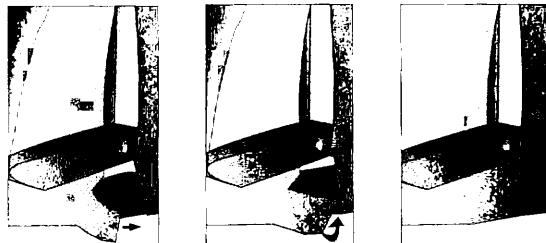

Installing backrest cover around armrests.

 D

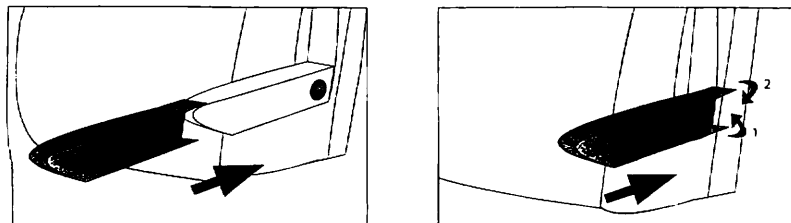



Installing armrest covers, affixing velcro.

COPYRIGHT 2005 SHRIN CORPORATION




Special Instructions - 2

Certain Late-Model vehicles, including Lexus, Toyota, Infiniti, Nissan Hyundai and others have a piece of fabric which prevents the seat cover flap from going through the opening of the seatback and seat bottom.


 
 
This flap will need to be removed to install the seat cover. Below are instructions detailing the methods used to remove this fabric

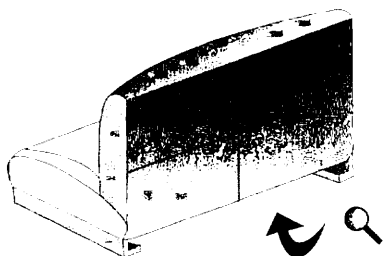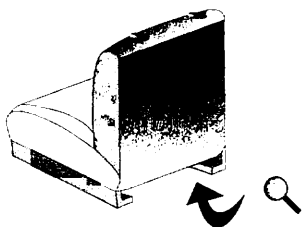

   The views shown below are looking at the bottom of the seat

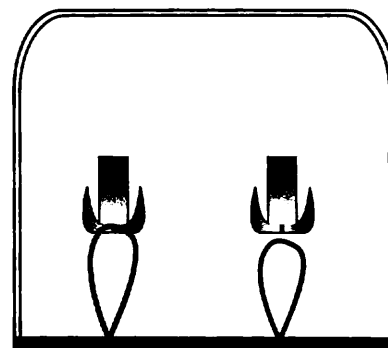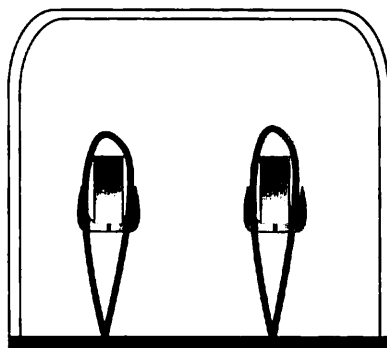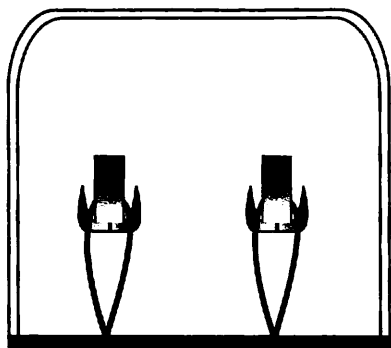


CONDITION 1 - An elastic strap holds the flap of fabric to some permanently mounted hooks. To remove, simply pull the elastic forward and remove the elastic loop from the hook.

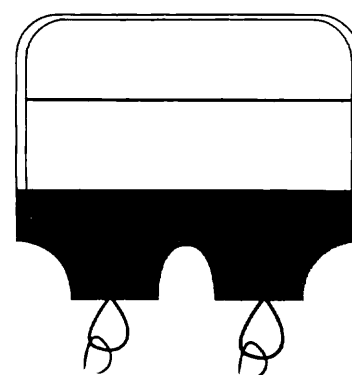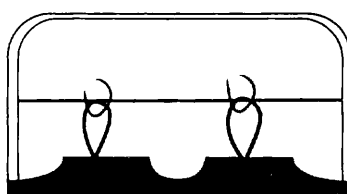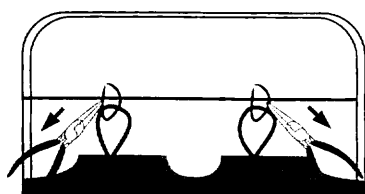   

Pliers required

CONDITION 2 - Metal hoops hold the flap of fabric to a steel support under the seat. To remove, use a set of pliers to open the hoop, and remove the fabric.

 
COPYRIGHT 2005 SHRIN CORPORATION

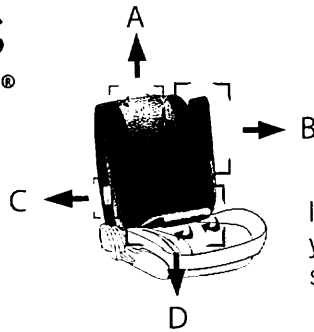

Finishing Touches


If you have extra time and a little mechanical inclination, your seat covers can fit even better by following these simple finishing touches:

 A

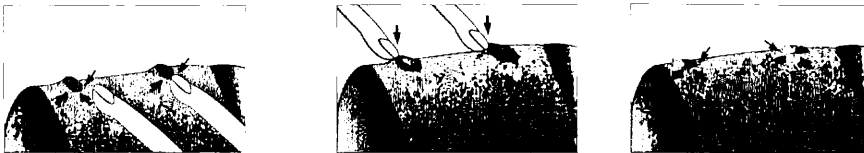


Material around the headrest posts can be stretched over the base and tucked underneath.

 B

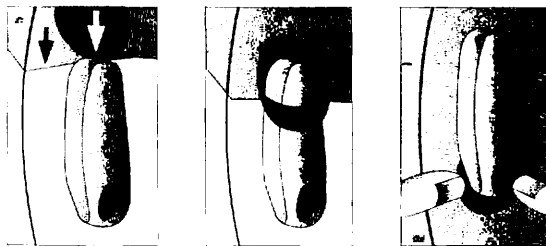


Adjust material around armrests by tucking excessive material around the base.

 C

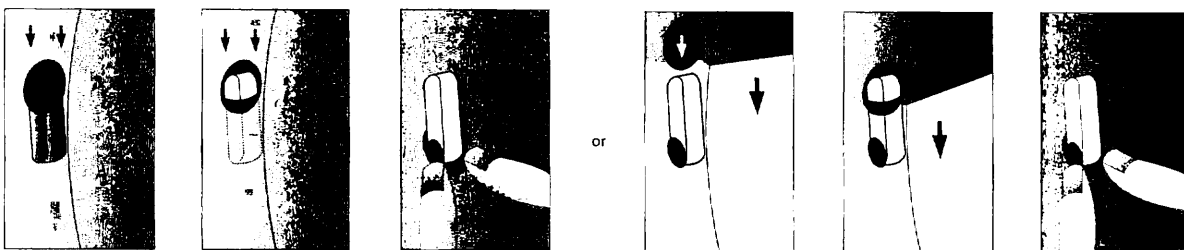

Pay special attention to small levers, such as lumbar support. Material should be tucked under the lever.

 D

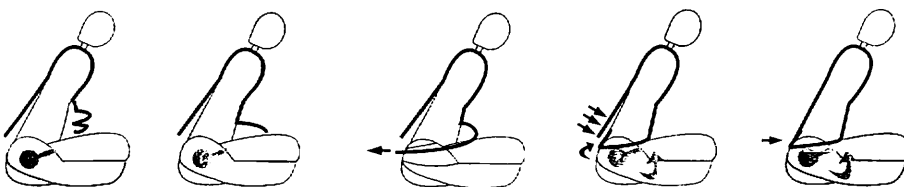

TIP: Fold the seatback forward for easier access

After the first two weeks of use, tighten the seat back covers by releasing them, and - using the assistance of another person - pull the material very tight, and affix the Velcro fastener.