



# CLASSIC GOLD®

## AUTHENTIC REPRODUCTION

### Side Curtain Set Original Style

### Installation Instructions

For AH 100-6 BN4, BN6,AH 3000 BN7, BT7

PART # 24B635/6

#### Tools required:

- Phillips screw driver
- Drill motor
- Combination wrench- 3/8"
- Drill bit - #9 (.196")

- 1) Lay a side curtain down so the flat side of the frame is facing up (the stepped side down). Install the brackets on to the side curtains as pictured. The order to assemble the hardware is as follows: Push screws up from stepped side. Place bracket on screw from flat side. Install a flat washer, lock washer and finally the acorn nut. Do not tighten the hardware. There are two holes drilled for the front bracket but only one hole for the rear bracket.

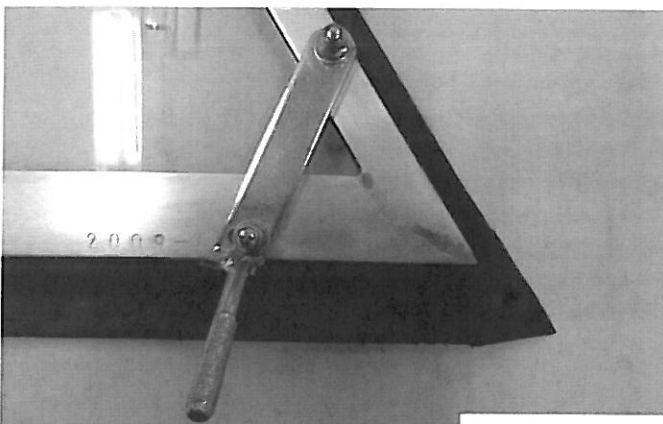


Illustration 1

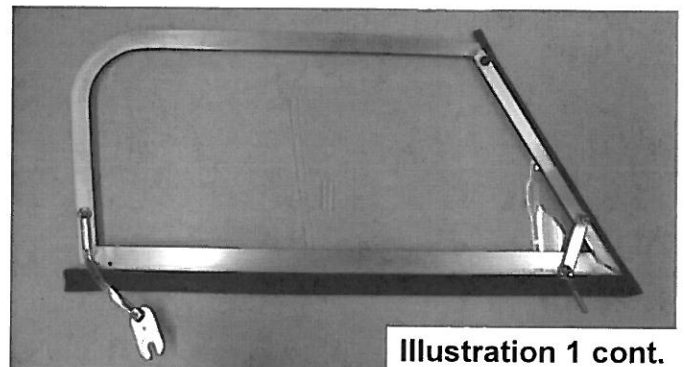
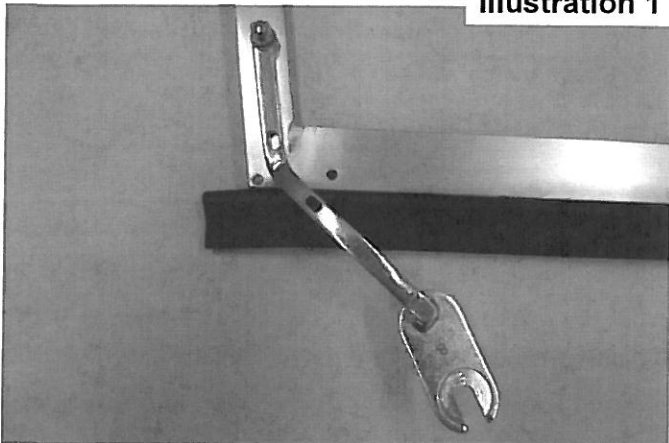


Illustration 1 cont.

- 2) With the brackets loosely attached to the frame, fit the side curtain to your car. Align the curtain and snug the brackets to the side curtain frame using a Phillips screw driver and 3/8" wrench. At this point you should be able to remove the side curtains without the brackets moving on the frame.
- 3) Optional: You may drill a second hole in the side curtain frame for the rear bracket. Use the bracket as a guide to drill a .196" hole through the frame. Install the hardware as outlined in step one.

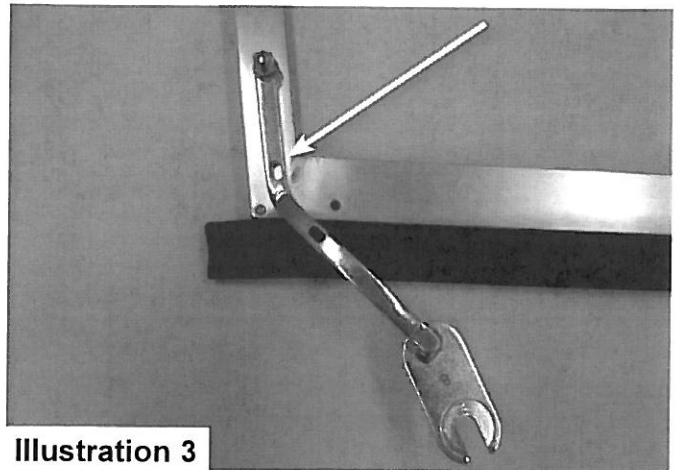


Illustration 3