
Supplemental Information for 458-294 Windblocker, Polycarbonate MGA

Contents of Kit

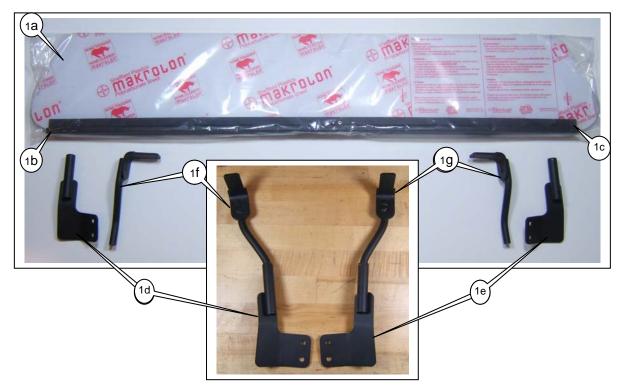

The two lower brackets (1d, 1e) are secured to the tapped plates that anchor the top frame just behind the door opening. The upper brackets (1f, 1g) have flat "tabs" that slide into the open ends (1b, 1c) of the rail that supports the windblocker (1a).

Although every effort has been made to ensure the accuracy and clarity of this information, errors and/or omissions on our part are almost inevitable. Any suggestions that you may have that will improve the information (especially detailed installation notes) are welcome. Please use the simple email form on the "Contact Us" page on the Moss website: http://www.mossmotors.com/AboutMoss/ContactUs.aspx
If you prefer, you may call our Technical Services Department at 805-681-3411. So many people call us for help that we are often not able to answer the calls as fast as we'd like, and you may be asked to leave a message. We apologize in advance for the inconvenience. We will get back to you within 2 business days.



Moss Motors, Ltd.

440 Rutherford Street, Goleta, California 93117
In the US & Canada Toll Free (800) 667-7872 FAX (805) 692-2510 (805) 681-3400

Moss Europe Ltd.

Hampton Farm Industrial Estate, Hampton Road West, Hanworth Middlesex, TW13 6DB In the UK: 020-8867-2020 FAX:- 020-8867-2030

Instruction Sheet 458-294 November 2009