


# Installation Instructions for Center Console

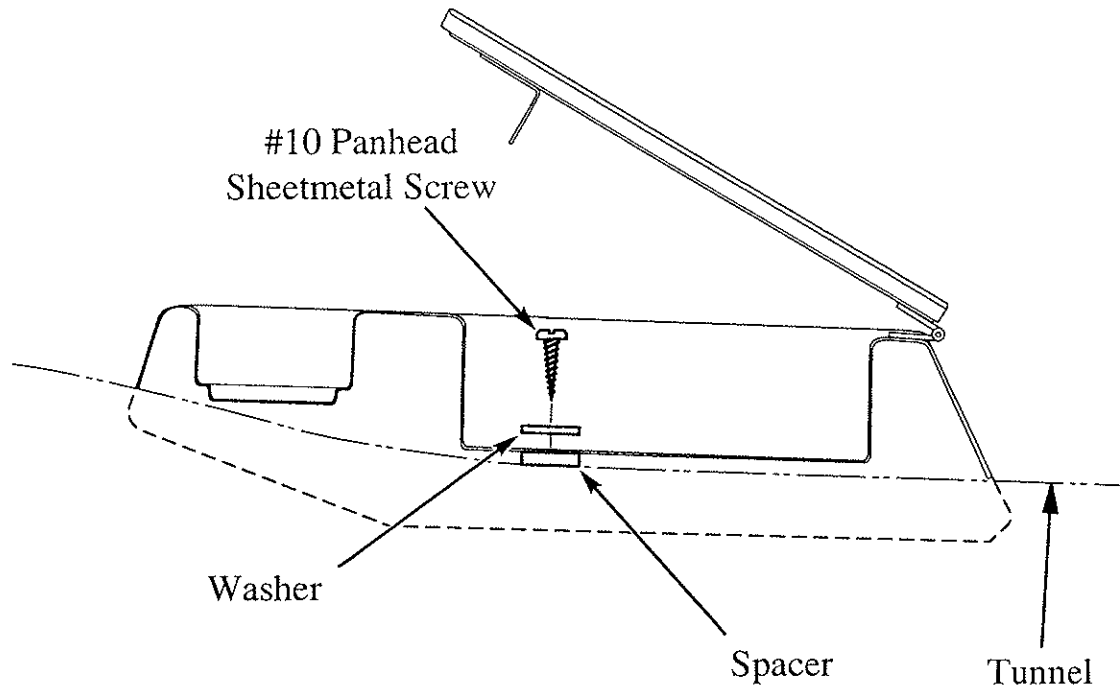

The recommended fastening method is to screw through the storage compartment and into the tunnel (see sketch). This is how consoles were installed at the factory.

Some installation methods such as Velcro or no fastening method at all are not recommended because of safety concerns. In the event of a collision, the console must be firmly secured so as not to become a loose projectile.

If you use the method shown above, be sure to use a large fender washer (1" diam. or larger) and spacer as shown to distribute stresses and avoid damage to the console compartment bottom. Because gaps differ according to where on the tunnel you would like the console positioned, it is not possible to supply a generic spacer. However it is easy to make one from scrap wood or washers at very minimal cost.

Tip: after determining where on the tunnel you would like to mount your console, squeeze clay or Play-doh® between the console and tunnel to measure the gap for your spacer.

